



# **Rineer High Torque Vane Motor MV015 Series Repair Manual – Standard Motors**



## **Overview of contents**

<b>Safety Information</b>	3
<b>Illustrated Parts List</b>	4
<b>Disassembly</b>	5
Seal Removal	5
Front Housing and Shaft Disassembly	5
Rotary Group Removal and Disassembly	6
<b>Inspection of Parts</b>	7
<b>Assembly</b>	9
Rotary Group Assembly	9
Front Housing and Shaft Assembly	9
Motor Assembly	10
<b>Torque and Lubricant Specifications</b>	12

The data specified only serves to describe the product.

No statements concerning a certain condition or suitability for a certain application can be derived from our information.

The information given does not release the user from the obligation of own judgement and verification. It must be remembered that our products are subject to a natural process of wear and aging.

©Bosch Rexroth Corporation

All rights reserved, including the right to apply for patent protection. It may not be reproduced or given to third parties without our consent.

The title page contains an illustration of a sample configuration. The product as delivered can differ from the illustration.

## **Safety Information**

### **About this documentation**

Bosch Rexroth Rineer hydraulic motors are designed and manufactured for the sole purpose of power transmission through hydraulic oil. Hydraulics is an inherently dangerous technology, and the improper use or maintenance of the product may result in an increased risk of personal injury and property damage. General hydraulic and mechanical safety practices should be followed when carrying out the steps outlined in this document.

### **Qualification of personnel**

Disassembly, repair, assembly, and installation of Rineer hydraulic motors requires basic hydraulic and mechanical knowledge, as well as knowledge of the corresponding technical terms.

### **Personal Protective Equipment (PPE)**

Personal protective equipment is the responsibility of the user of the vane motor. Observe the safety regulations in your country. All pieces of personal protective equipment must be intact.


Illustrated Parts List

The diagram illustrates the exploded view of the Rineer High Torque Vane Motor MV015 Series. Key components shown include the front housing (2010), rear housing (2020), stator (1010), rotor (1020), distributor plate (1050), and various seals and bearings. The parts are labeled with their respective part numbers, such as 1010 for the stator, 1020 for the rotor, 1050 for the distributor plate, and 2010 for the front housing. The diagram also shows the drive shaft (3010) and the ball bearing (3020) assembly.

ITEM	DESCRIPTION	QTY
1010	STATOR	1
1020	ROTOR	1
1030	VANE, ROTOR	10
1040	VANE, STATOR	4
1050	DISTRIBUTOR PLATE	2
1060	SPRING, ROTOR OUTER	20
1061	SPRING, ROTOR INNER	20
1070	SPRING, STATOR	8
2010	HOUSING, FRONT	1
2020	HOUSING, REAR	1
2030	DOWEL PIN, FRONT	2
2035	DOWEL PIN, REAR	2
2040	BALL	4
3010	DRIVE SHAFT	1
3020	BALL BEARING	1
3029	RETAINING RING	1
3030	NEEDLE BEARING	1
3040	SEALING PLATE	1
3049	RETAINING RING, SEAL PLATE	1
4010	O-RING, MAINBODY	4
4040	O-RING	1
4140	QUAD RING, SHAFT SEAL	1
4145	DUST SEAL	1
7010	SHCS, MAINBODY	4
7020	SHCS, DISTRIBUTOR PLATE	4
7910	THREADED PLUG	1

## Seal Removal

**1**

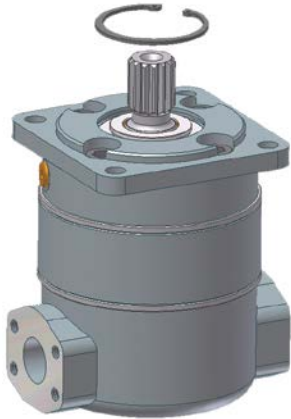


- 1) Remove seal plate retaining ring or socket head cap screws (dependent on motor design).

### **WARNING:**

Use caution when removing retaining ring. If released accidentally, it can become an airborne hazard.

**2**

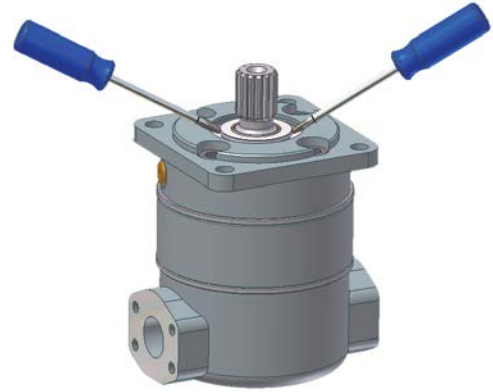

- 1) Pry out shaft seal plate with appropriate removal tools.
- 2) Remove seal plate o-ring from groove in bearing bore.

### **NOTE:**

The shaft seal on a standard motor is pressed in and can be removed in the reverse manner.

## Front Housing and Shaft Disassembly

**3**



- 1) Secure the motor in a suitable mount.
- 2) To ensure proper orientation during reassembly, use a paint pen or marker to mark a line down the side of the motor.
- 3) Loosen and remove the four (4) 5/8-11 socket head cap screws.

**4**




- 1) Remove front housing.
- 2) Remove o-ring from front housing.

### **NOTE:**

Two (2) 5/16" check balls may be dislodged during removal.

**5**

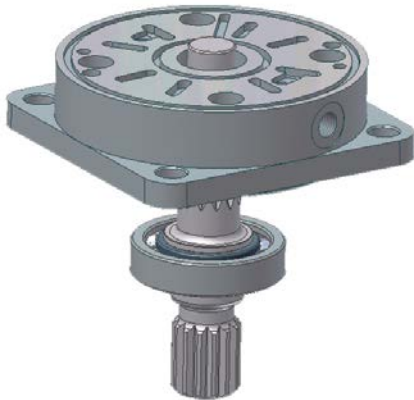

- 1) With the seal plate removed, press the shaft and bearing out of the front housing.

**6**



- 1) Remove bearing retaining ring or lock nut and washer from shaft (dependent on motor design).
- 2) Press shaft out of bearing.

**NOTE:**

Inspect bearing prior to removal to determine if removal and replacement is necessary.

**WARNING:**

Use caution when removing snap ring. If released accidentally, it can become an airborne hazard.

**Rotary Group Removal and Disassembly**

**7**




- 1) Remove rotary group from rear housing.
- 2) Remove o-ring from housing.
- 3) Remove dowel pins from the rotary group.

**8**



- 1) Remove the two 10-32 screws.
- 2) Remove the distributor plate.

**9**

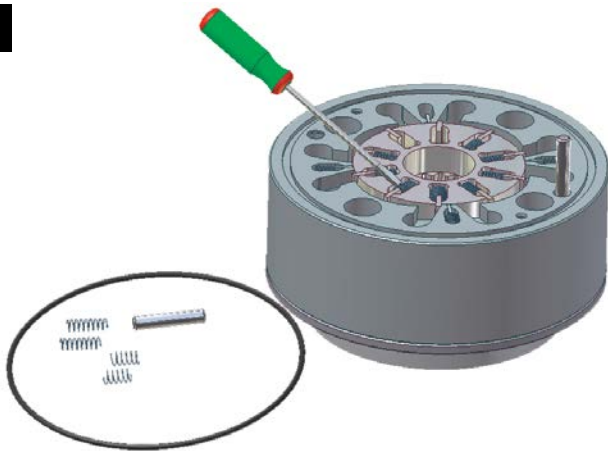


- 1) Using a suitable removal tool, remove all rotor and stator springs.
- 2) Remove the main body o-ring.

**10**




- 1) Reinstall distributor plate on rotary group.
- 2) Holding the distributor plate in place, turn the rotary group over.
- 3) Repeat steps 8 & 9.

**11**

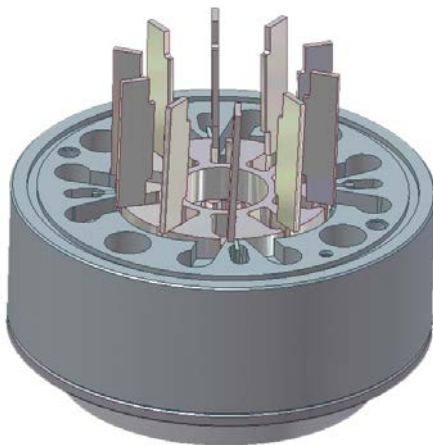

- 1) Remove the rotor.
- 2) Remove the rotor vanes and stator vanes.
- 3) Separate parts and clean in a suitable manner.

**12**

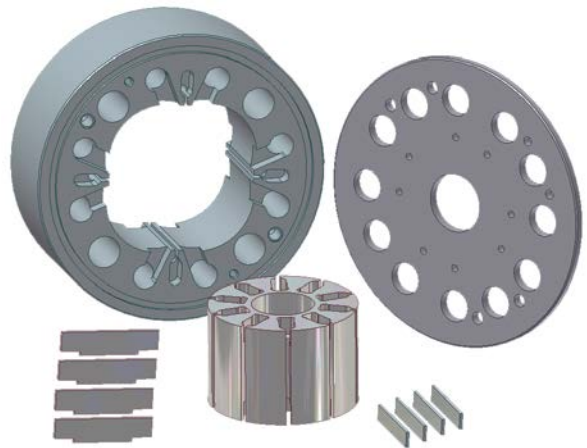


- 1) Inspect all parts and replace any which show signs of damage or excessive wear.

**NOTE:**

Rineer recommends to replace all springs, o-rings, and seals whenever the motor is disassembled.

13

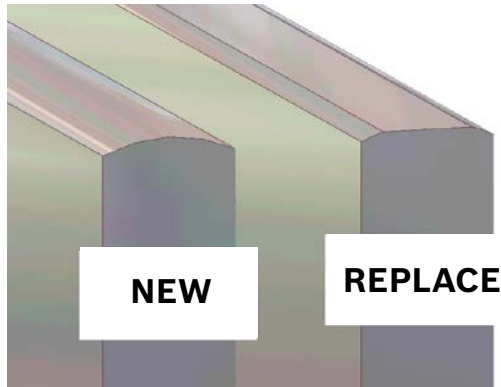


#### VANES:

Normal wear results in slight flattening of the vane tips, which does not impact motor performance. Replace vane if radius is reduced by more than 50%.

Clearance between the rotor vanes and rotor vane slots varies based off of the vane selection. Some movement of the vane within the vane slot is expected.

14

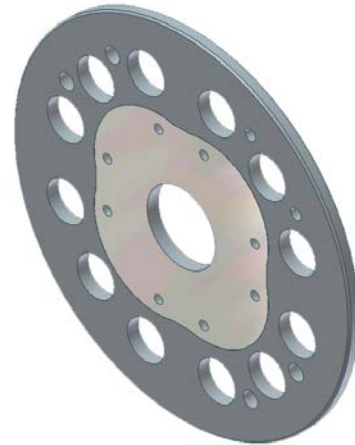

#### PLATES:

Normal wear results in marking or polishing of the distributor plate surface. This does not impact motor performance.

Replacement of the distributor plate is required if any smearing, galling, or heat cracks are present.

15



#### ROTOR:

Normal wear results in the polishing of the rotor faces. This does not impact motor performance.

Some polishing in the slot is normal, but any evidence of wear pocket formation, galling, or heat cracks requires replacement of the rotor.

16



#### STATOR:

Normal wear results in polishing of the cam form. This does not impact motor performance.

Some expected wear may be visible along the corner of one side of the vane slot. Consult your Rineer representative with any questions or concerns.



## Rotary Group Assembly

**17**



- 1) Reassemble the rotary group by following the procedures of steps 11, 10, 9, and 8 in reverse.
- 2) Pour a small amount of hydraulic oil onto the rotor surface.

### NOTE:

Ensure the radiused edge of each stator vane points to the rotor.  
 Ensure the radiused edge of each rotor vane points to the stator.  
 Ensure all springs are seated in the spring pocket.  
 Do not allow spring coils to catch on vanes.

**19**



- 1) Press shaft and bearing assembly into front housing.

### NOTE:

Use a proper pressing method to install the assembly, being sure to press only on the outer race of the bearing.

## Front Housing and Shaft Assembly

**18**




- 1) Press bearing onto shaft.
- 2) Install retaining ring.

### WARNING:

Use caution when installing retaining ring.  
 If released accidentally, it can become an airborne hazard.


**20**

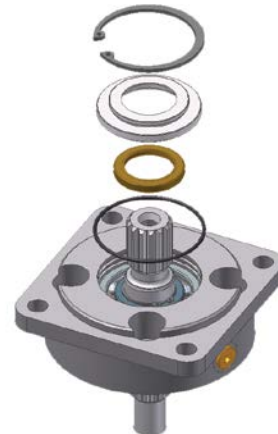

- 1) Install shaft assembly and seal plate by following the procedures of steps 2, and 1 in reverse.

## Motor Assembly

**21**

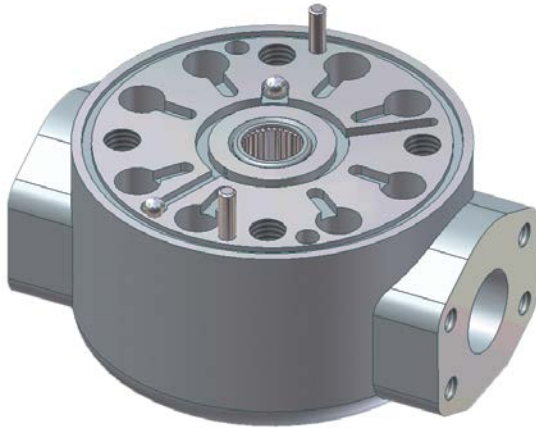


- 1) Install dowel pins into rear housing.
- 2) Install check balls.
- 3) Install main body o-ring.

### NOTE:

Ensure the o-ring is properly held in place in the corresponding groove. Grease can be used as needed to help retain o-rings.

**22**

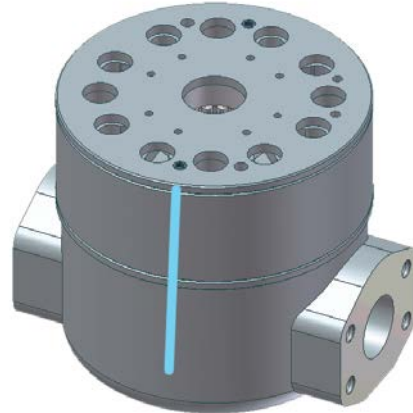

- 1) Place rotary group onto rear housing.
- 2) Install dowel pins.

### NOTE:

Line up the rotary group and housings using the lines created in step 3.

**23**




- 1) Install main body o-ring into front housing.
- 2) Install check balls.

### NOTE:

Ensure the o-ring and check balls are properly held in place in the corresponding groove. Grease can be used as needed to help retain o-rings and check balls.

**24**

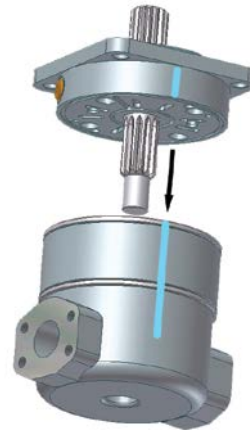


- 1) Install front housing onto rotary group.

### NOTE:

Line up the rotary group and housings using the lines created in step 3.

Ensure the o-ring and check balls do not become dislodged during assembly.

**25**

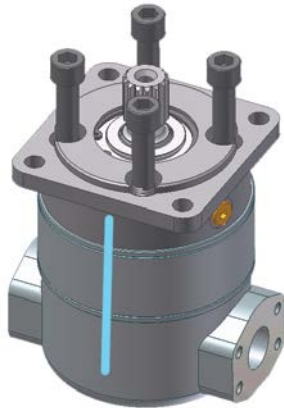


- 1) Grease the threads of the 5/8-11 socket head cap screws.
- 2) Apply a small amount of grease underneath of the head of each screw.
- 3) Insert the screws into the motor.

**NOTE:**

Refer to the torque specifications on page 11.

**26**

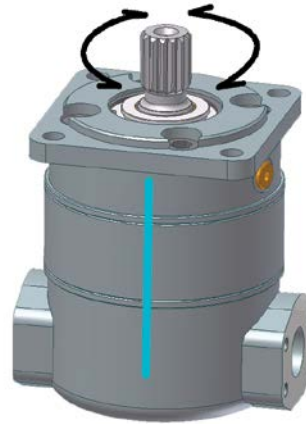

- 1) Rotate shaft by hand to ensure no binding is present.

## Torque Specifications\*

Main body screws (5/8-11): 180 ft-lb

Seal plate (10-32): 6 ft-lb

\*Applicable fasteners dependent on motor design. Consult your Rineer representative for clarification.

## Lubricant Specifications

Shaft seal: Sta-Lube Moly-Graph

Main body bolt threads: Mobil Mobilgrease CM-S

O-ring retention: Mobil Mobilgrease CM-S

## Notes

**Bosch Rexroth Corp.**

## Hydraulics

3940 Gantz Road, Suite F

Grove City, OH 43123-4845

U.S.A.

Telephone (864) 967-2777

[www.boschrexroth-us.com](http://www.boschrexroth-us.com)

© All rights reserved Bosch Rexroth Corp. This document, as well as the data, specifications and other information set forth in it, are the exclusive property of Bosch Rexroth Corp. It may not be reproduced or given to third parties without its consent.

The data specified above only serve to describe the product. No statements concerning a certain condition or suitability for a certain application can be derived from our information. The information given does not release the user from the obligation of own judgment and verification. It must be remembered that our products are subject to a natural process of wear and aging.