



# **Rineer High Torque Vane Motor MV057 Series Repair Manual – Standard Motors**



## **Overview of contents**

<b>Safety Information</b>	2
<b>Illustrated Parts List</b>	3
<b>Disassembly</b>	4
Seal Plate Removal	4
Shaft Group Disassembly	4
Housing and Rotary Group Removal	5
Rotary Group Disassembly	6
<b>Inspection of Parts</b>	7
<b>Assembly</b>	8
Rotary Group Assembly	8
Shaft Group Assembly	8
Motor Assembly	9
<b>Torque and Lubricant Specifications</b>	10

The data specified only serves to describe the product.

No statements concerning a certain condition or suitability for a certain application can be derived from our information.

The information given does not release the user from the obligation of own judgement and verification. It must be remembered that our products are subject to a natural process of wear and aging.

©Bosch Rexroth Corporation

All rights reserved, including the right to apply for patent protection. It may not be reproduced or given to third parties without our consent.

The title page contains an illustration of a sample configuration. The product as delivered can differ from the illustration.

## **Safety Information**

### **About this documentation**

Bosch Rexroth Rineer hydraulic motors are designed and manufactured for the sole purpose of power transmission through hydraulic oil. Hydraulics is an inherently dangerous technology, and the improper use or maintenance of the product may result in an increased risk of personal injury and property damage. General hydraulic and mechanical safety practices should be followed when carrying out the steps outlined in this document.

### **Qualification of personnel**

Disassembly, repair, assembly, and installation of Rineer hydraulic motors requires basic hydraulic and mechanical knowledge, as well as knowledge of the corresponding technical terms.

### **Personal Protective Equipment (PPE)**

Personal protective equipment is the responsibility of the user of the vane motor. Observe the safety regulations in your country. All pieces of personal protective equipment must be intact.

Illustrated Parts List

ITEM	DESCRIPTION	QTY
1010	STATOR	1
1020	ROTOR	1
1030	VANE, ROTOR	10
1040	VANE, STATOR	4
1050	DISTRIBUTOR PLATE	2
1060	SPRING, ROTOR OUTER	20
1061	SPRING, ROTOR INNER	20
1070	SPRING, STATOR	8
1071	FLAT SPRING	8
2010	HOUSING, FRONT	1
2020	HOUSING, REAR	1
2030	DOWEL PIN	4
3010	DRIVE SHAFT	1
3020	BALL BEARING	1
3028	LOCK WASHER	1
3029	LOCK NUT	1
3030	NEEDLE BEARING	1
3040	SEALING PLATE, FRONT	1
4010	O-RING, MAINBODY	4
4020	O-RING, PEDESTAL	2
4021	O-RING, PEDESTAL	2
4022	O-RING, PEDESTAL	2
4040	O-RING, SEAL PLATE, FRONT	1
4140	SHAFT SEAL, FRONT	1
7010	SHCS, MAINBODY	8
7020	SHCS, DISTRIBUTOR PLATE	4
7040	SHCS, SEAL PLATE, FRONT	6
7810	THREADED PLUG, NPT	1

## Seal Plate Removal

**1**



- 1) Loosen and remove the six (6) 3/8-16 seal plate socket head cap screws or retaining ring (dependent on motor design).

### **WARNING:**

Use caution when removing retaining ring. If released accidentally, it can become an airborne hazard.

**2**



- 1) Remove shaft seal plate with appropriate removal tools.
- 2) Remove seal plate o-ring.

### **NOTE:**

The shaft seal on a standard motor is pressed in and can be removed in the reverse manner.

## Shaft Group Disassembly

**3**



- 1) Remove shaft from the motor.

### **NOTE:**

The end of the shaft is tapped with a 1/2-13 hole on a standard series motor. This hole can be used to remove the shaft with an appropriate removal tool.

**4**



- 1) Remove bearing lock nut and washer or retaining ring from shaft (dependent on motor design).
- 2) Press shaft out of bearing

### **NOTE:**


Inspect bearing prior to removal to determine if removal and replacement is necessary.

### **WARNING:**

Use caution when removing retaining ring. If released accidentally, it can become an airborne hazard.


## Housing and Rotary Group Removal

**5**

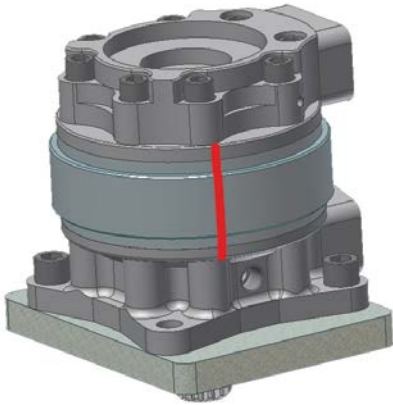

- 1) Position the unit as shown in a suitable mount.
- 2) To ensure proper orientation during reassembly, use a paint pen or marker to mark a line down the side of the motor.

**6**

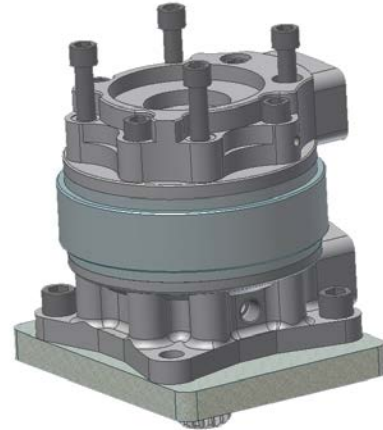

- 1) Loosen and remove the eight (8) 5/8-11 main body socket head cap screws.

**NOTE:**


Any bolt heads showing corrosion or rounding of the internal hex should be replaced.

**7**



- 1) Remove rear housing.
- 2) Remove o-rings from housing.
- 3) Remove dowel pins from the rotary group.


**8**

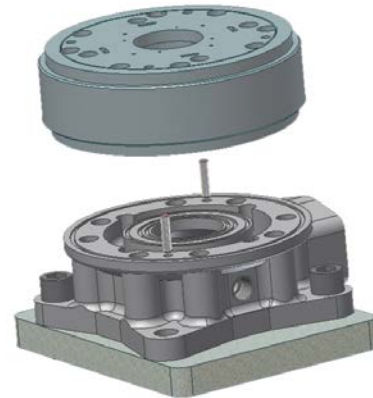

- 1) Remove rotary group from front housing.
- 2) Place rotary group on a clean surface for disassembly and inspection.
- 3) Remove o-rings from front housing.
- 4) Remove dowel pins from front housing.


## Rotary Group Disassembly

**9**

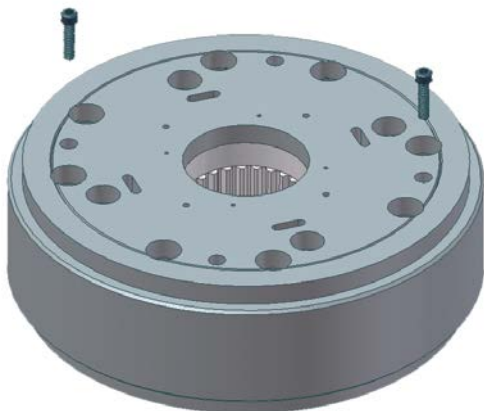

- 1) Remove the two (2) 10-32 screws.
- 2) Remove the distributor plate.

**10**

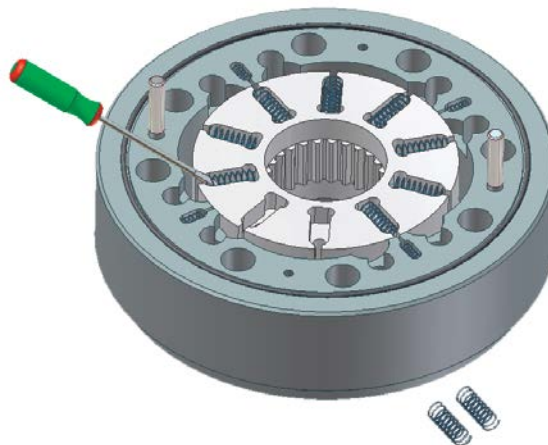


- 1) Using an appropriate removal tool, remove all rotor and stator springs.
- 2) Remove the main body o-ring.

**11**



- 1) Reinstall distributor plate on rotary group.
- 2) Holding the distributor plate in place, turn the rotary group over.
- 3) Repeat steps 9 & 10.

**12**

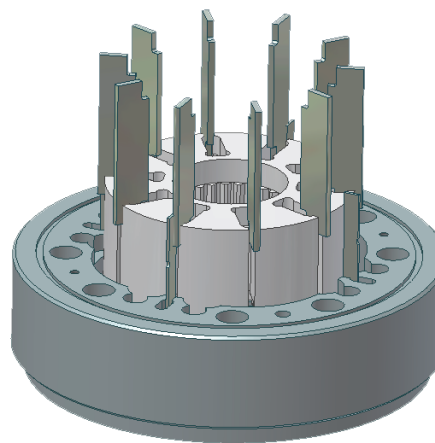

- 1) Remove the rotor.
- 2) Remove the rotor vanes and stator vanes.
- 3) Separate parts and clean in a suitable manner.



## Inspection of Parts

**13**




1) Inspect all parts and replace any which show signs of damage or excessive wear.

**NOTE:**

Rineer recommends to replace all springs, o-rings, and seals whenever the motor is disassembled.

**14**

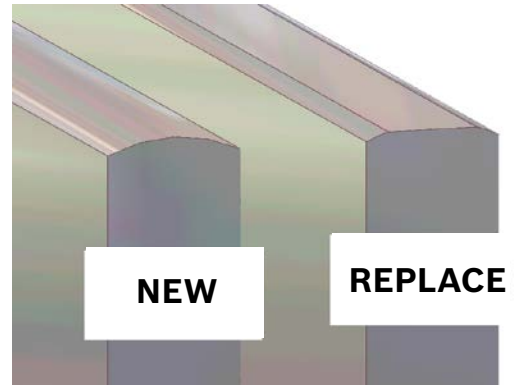

**VANES:**

Normal wear results in slight flattening of the vane tips, which does not impact motor performance. Replace vane if radius is reduced by more than 50%.

Clearance between the rotor vanes and rotor vane slots varies based off of the vane selection. Some movement of the vane within the vane slot is expected.

**15**




**PLATES:**

Normal wear results in marking or polishing of the distributor plate surface. This does not impact motor performance.

Replacement of the distributor plate is required if any smearing, galling, or heat cracks are present.

**16**

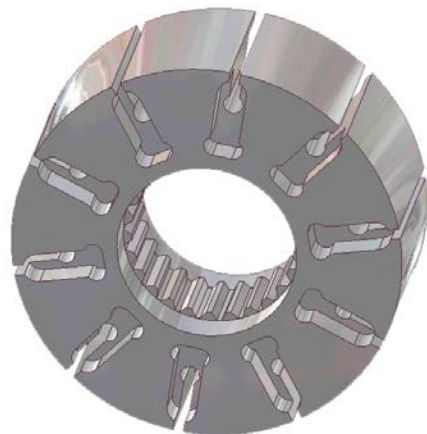


**ROTOR:**

Normal wear results in the polishing of the rotor faces. This does not impact motor performance.

Some polishing in the slot is normal, but any evidence of wear pocket formation, galling, or heat cracks requires replacement of the rotor.



17

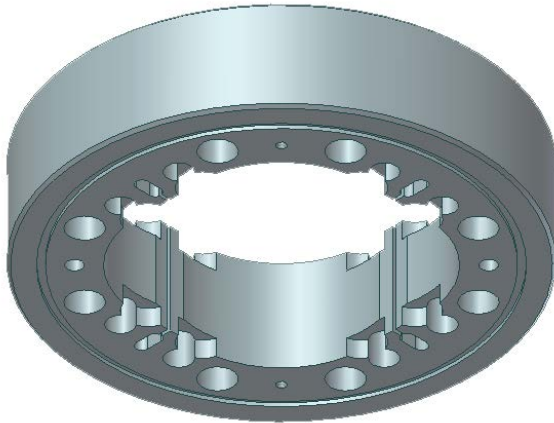


**STATOR:**  
Normal wear results in polishing of the cam form. This does not impact motor performance.

Some expected wear may be visible along the corner of one side of the vane slot. Consult your Rineer representative with any questions or concerns.

### Shaft Group Assembly

19

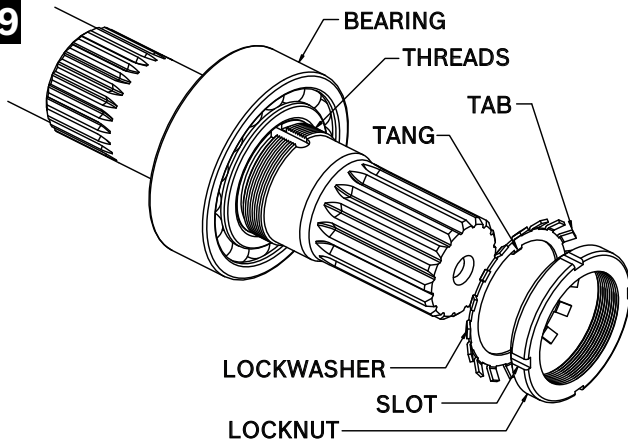

- 1) Clean shaft, threads and locknut prior to assembly.
- 2) Test fit thread form by assembling lock nut onto shaft and rotating it several turns.
- 3) Remove locknut.
- 4) Press bearing onto the shaft using proper pressing method.
- 5) Slide the lockwasher over the end of the shaft, aligning the internal tang with the slot on the shaft. Place the lockwasher flat against the inner race of the bearing.

### Rotary Group Assembly

18



- 1) Reassemble the rotary group by following the procedures of steps 12, 11, 10, and 9 in reverse.
- 2) Pour a small amount of hydraulic oil onto the rotor surface.

#### **NOTE:**

Ensure the radiused edge of each stator vane points to the rotor.  
Ensure the radiused edge of each rotor vane points to the stator.  
Ensure all springs are seated in the spring pocket.  
Do not allow spring coils to catch on vanes.

- 6) Assemble locknut onto the shaft until it is tight against the lockwasher and bearing. If needed, tighten the locknut until it is squarely aligned with one of the tabs on the lockwasher.
- 7) Bend only one tab into a slot on the locknut to prevent the locknut from loosening.

#### **NOTE:**

Do not attempt to bend a partially aligned tab. Contact your Rineer representative with questions or concerns.

## Motor Assembly

**20**




- 1) Using a medium India honing stone, lightly dress all machine surfaces to remove any defects or burrs.

### NOTE:

Closely inspect the machined faces on the front and rear housing. Rough handling can cause raised surfaces near the O.D. of the housings. The pedestal surface is 0.002-0.003" below the outer machined surface. Dress these surfaces independently.

**22**

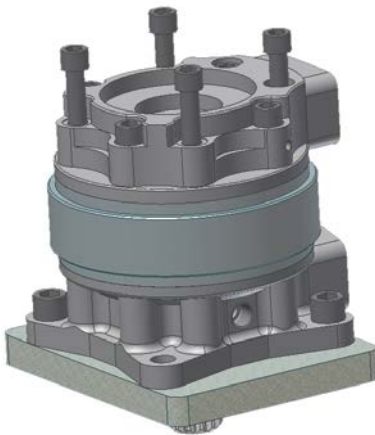


- 1) Grease the threads of the 5/8-11 socket head cap screws.
- 2) Apply a small amount of grease underneath the head of each screw.
- 3) Insert the screws into the motor.
- 2) Tighten the screws in a star pattern.

### NOTE:

Refer to the torque specifications on page 10.

**21**

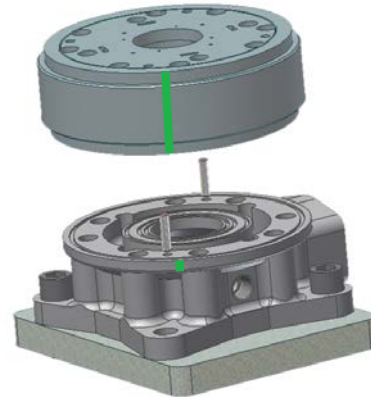

- 1) Reassemble the motor by following the procedures of steps 8 and 7 in reverse.

### NOTE:

Ensure the o-rings are properly held in place in the corresponding grooves. Grease can be used as needed to help retain o-rings. Line up the rotary group and housings using the lines created in step 5.

**23**



- 1) Install shaft assembly and seal plate by following the procedures of steps 3, 2, and 1 in reverse.
- 2) Tighten the screws in a star pattern.

### NOTE:

Refer to the torque specifications on page 10.

## Torque Specifications\*

### Main body screws (5/8-11) - Code 61

Single stack: 200 ft-lb

4-port: 200 ft-lb

## Main body screws (5/8-11) - Code 62

Single stack: 220 ft-lb

4-port: 220 ft-lb

Seal plate screws (3/8-16): 45 ft-lb

Seal plate screws (5/16-18): 25 ft-lb

\*Applicable fasteners dependent on motor design. Consult your Rineer representative for clarification.

## Lubricant Specifications

Shaft seal: Sta-Lube Moly-Graph

Main body bolt threads: Mobil Mobilgrease CM-S

O-ring retention: Mobil Mobilgrease CM-S

## Notes

**Bosch Rexroth Corp.**

Hydraulics

3940 Gantz Road, Suite F  
Grove City, OH 43123-4845  
U.S.A.

Telephone (864) 967-2777  
[www.boschrexroth-us.com](http://www.boschrexroth-us.com)

© All rights reserved Bosch Rexroth Corp. This document, as well as the data, specifications and other information set forth in it, are the exclusive property of Bosch Rexroth Corp. It may not be reproduced or given to third parties with its consent.

The data specified above only serve to describe the product. No statements concerning a certain condition or suitability for a certain application can be derived from our information. The information given does not release the user from the obligation of own judgment and verification. It must be remembered that our products are subject to a natural process of wear and aging.